


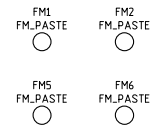

Solder paste FM
Place at every corner, top and bottom layer.



NSP					
Design	ADE7878A	Block	LOOP	Drawing	Misc
Author	Nicholas Savenlid	Date	2013-06-13	REV	1.0
				Page	S3